



# Installation instructions

## Alu30 Top slide




Link to  
Technical sheet  
Alu30 Top slide

scan me




Retrouvez toutes nos solutions  
RIDEAU ALUMINIUM  
DES VEHICULES SPECIAUX  
sur [www.mcd-fr.com](http://www.mcd-fr.com)


## Basic content of the parcel

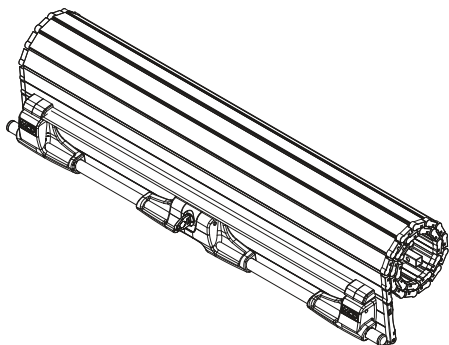

An assembled shutter with balancer

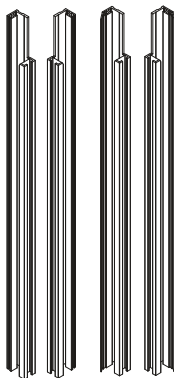


2 pairs of  
side tracks

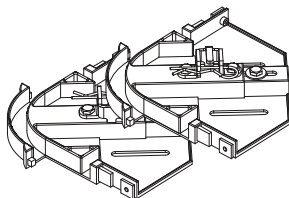


Accessories

## Basic content of the packet of accessories:


- 1 -> Right side panel
- 2 -> Left side panel
- 3 -> Beta pin 2.5

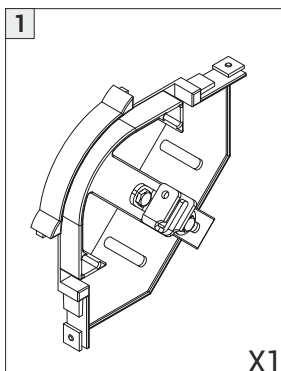

X1

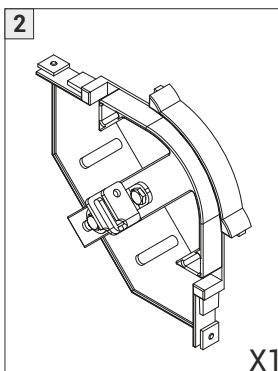


X1

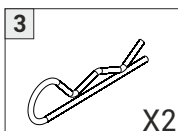

X2

## Additional content of accessories (+ back):


- 4 -> 90° corner

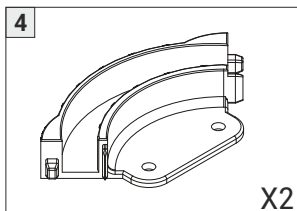


X2

## Options


### LED lighting

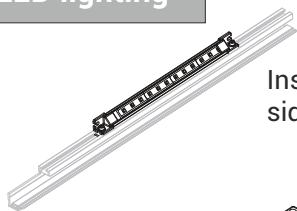

Installed on  
side tracks

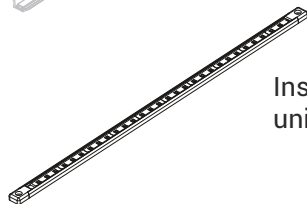


Installed on  
universal profile

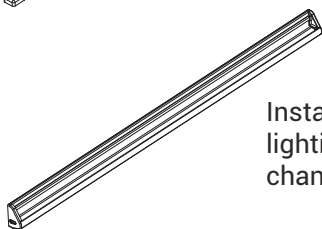


Installed on  
lighting drip  
channel

### Sensors

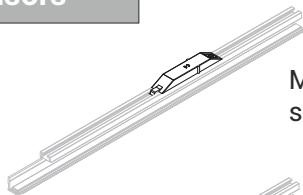


Magnetic  
sensor

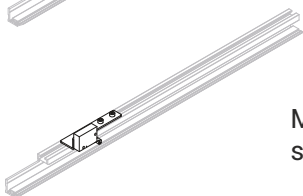

Mechanical  
sensor

### Aluminium profiles




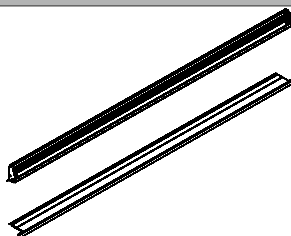


Sill plate  
drip channel

## Optional accessories contents:




### Double handle closing system

- 1 -> Double handle
- 2 -> Caps
- 3 -> Screw TH 4X10
- 4 -> Ring Az4

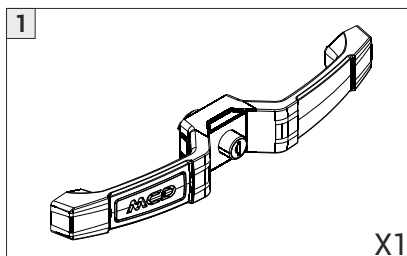


### Bar lift handle closing system

- 1 -> Blocking strikers
- 2 -> Top stoppers
- 3 -> Black rivet 3.2

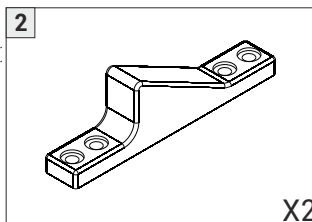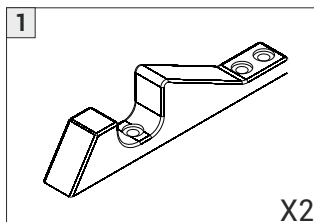

## Pull strap option

1 -> Rivet 4.8 x 16



## Interior unlocking option for double handle


1 -> Assembled omega

2 -> Opening pedal


3 -> Deck plate

4 -> Vis poelier 6X30


5 -> Rivet 4X8

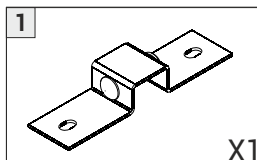


X1

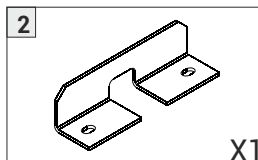


X1

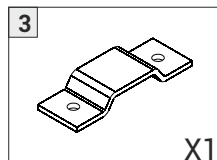

X1



X2



X1



## Interior unlocking option for bar lift handle

1 -> Assembled option


2 -> Rivets 4.8X10

3 -> Rivets 4X8


4 -> Deck plate

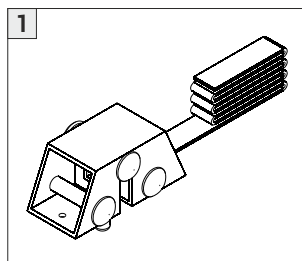

X2



X2

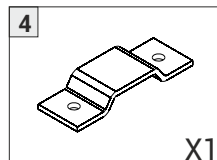


X1


## Electric locking system option

1 -> Electro magnet

2 -> Rivet 4.8X10

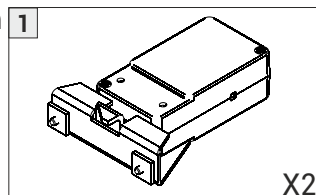


X2

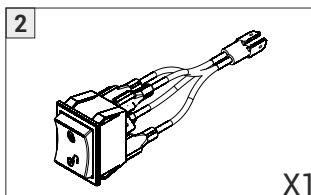


X1

# Installation


## 1 Sill plate installation (option)

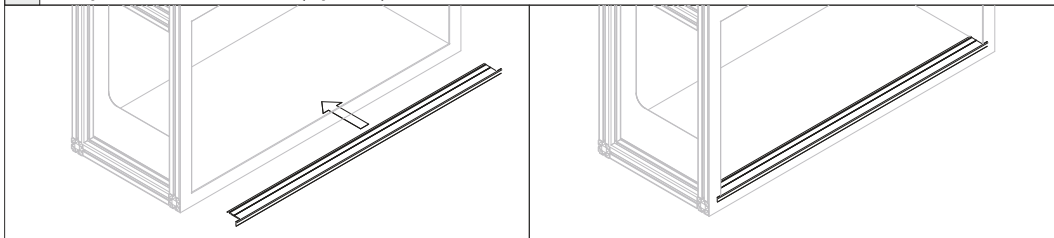

## 2 Assemble the side panels with the vertical side tracks and place the assembly in the compartment.

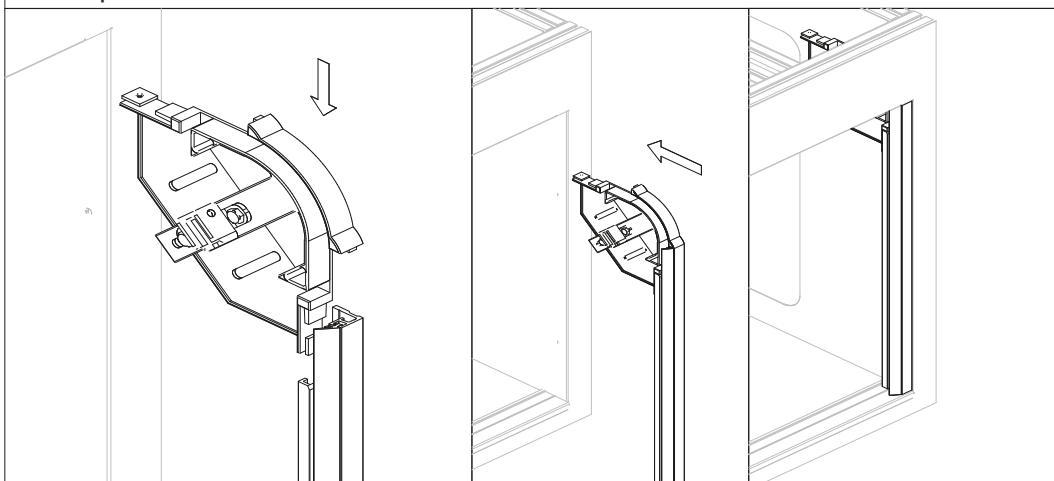


## 3 Following depth space in the compartment, assemble the horizontal tracks, 90° rear corner and rear vertical tracks before placing the assembly in the compartment.

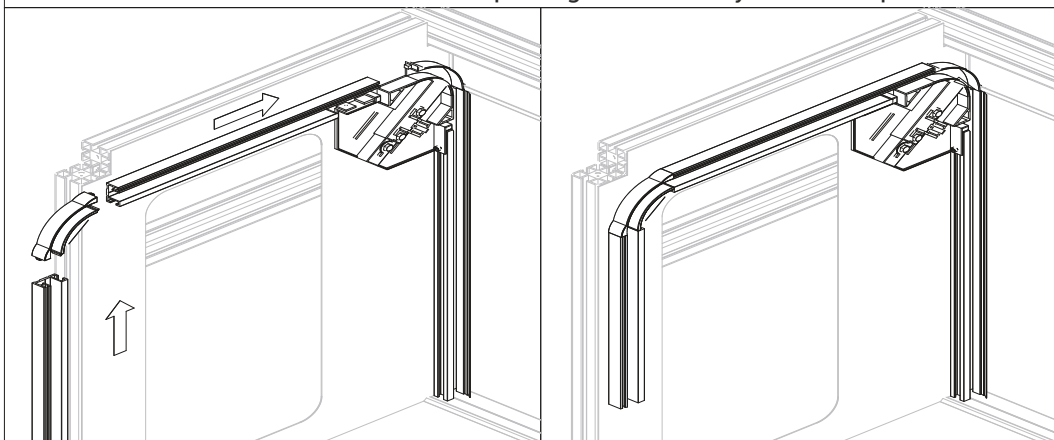


## Installation

- 4** Drill the compartment at the location of the tracks holes made by MCD (1-2) and install the whole assembly except the vertical tracks. Unscrew the 3 screws model TH10 on the side panels (3) and glide the internal mobile part in order to simplify the installation of the shutter.




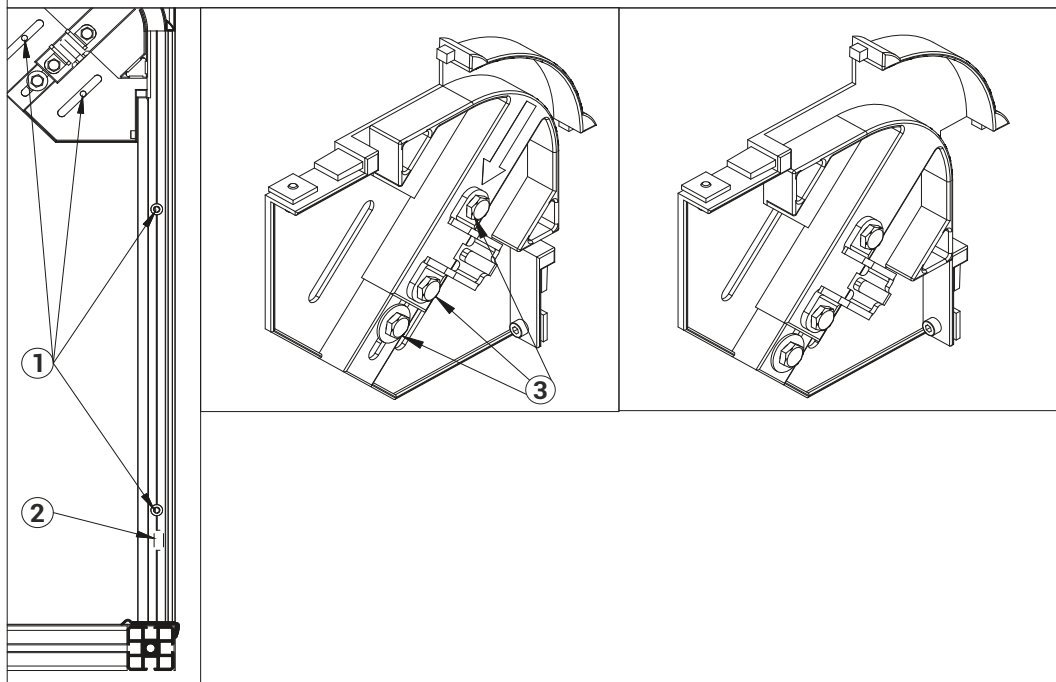


- 5** Unroll the wrapped shutter and glide it by the top into the side panels and horizontal tracks. Put back the mobile internal part of the side panels against the shutter to guide it properly and screw the to lock the position.

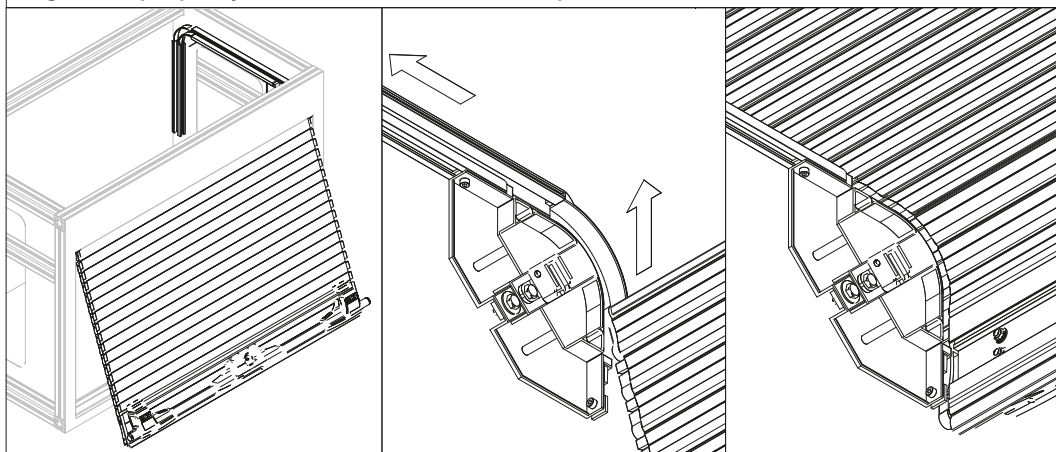


## Installation

- 6** Open the shutter to roll it till the top of the compartment. Glide the tracks in the bottom profile (A) and push them in the opening before screwing it on the wall (B). Lock the side panels - tracks assembly by using the dedicated screws (D).

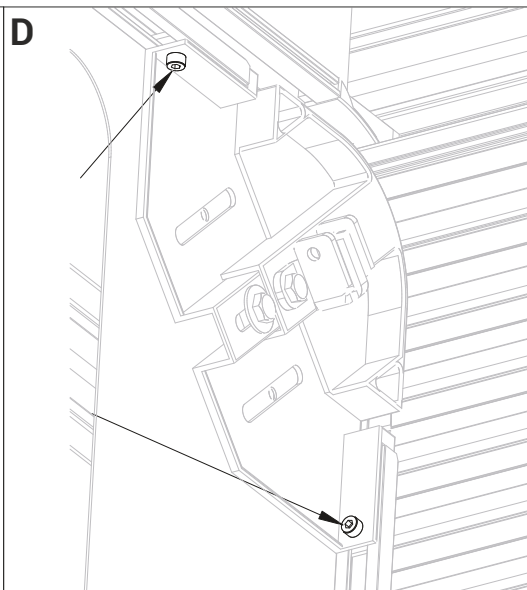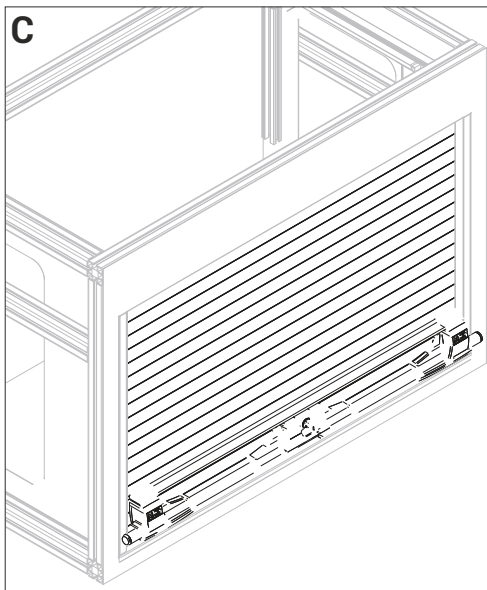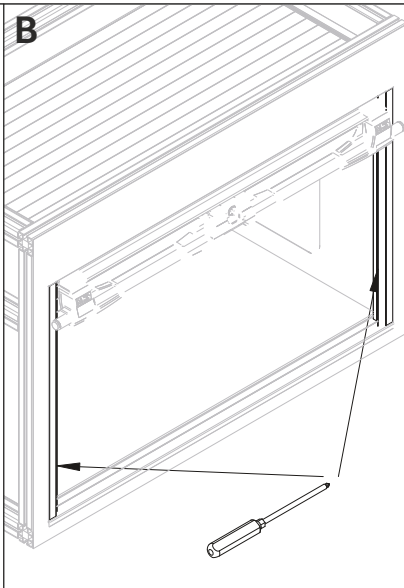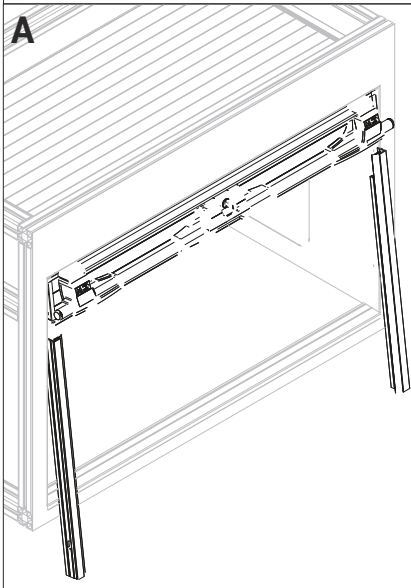


## Installation

- 7** Install the balancer in the roller support taking care to the installation side of the balancer (refer to the label position on the drawing below as example).

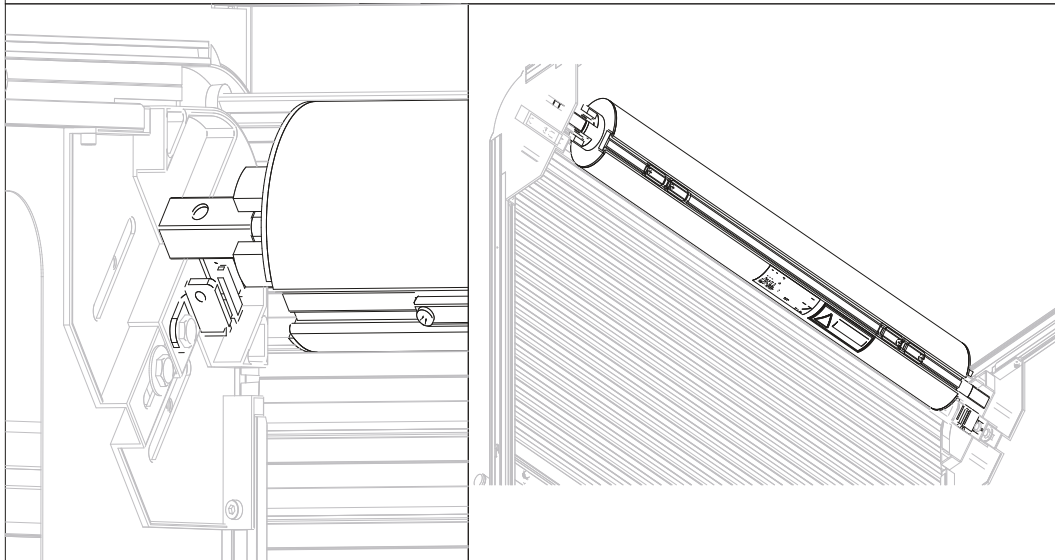


- 8** Insert the beta pin through the roller support to secure the balancer position.

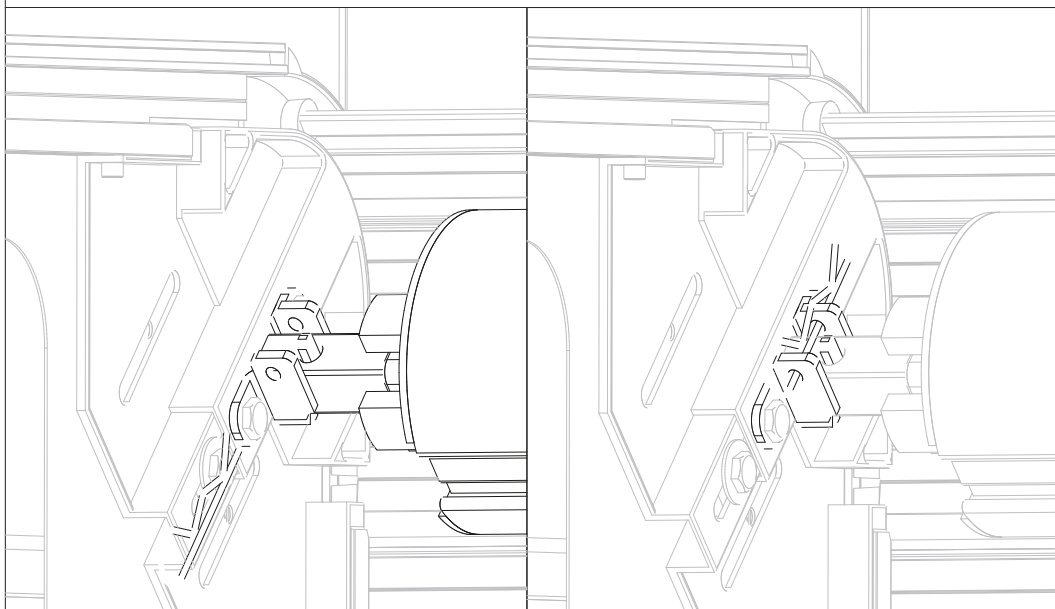




## Installation

- 9 Link the cables installed on the shutter bottom profile to the balancer taking care of the rolling side of the balancer. The installation of the cables has to be made in diagonal to avoid the cables rolling on themselves when opening the shutter.

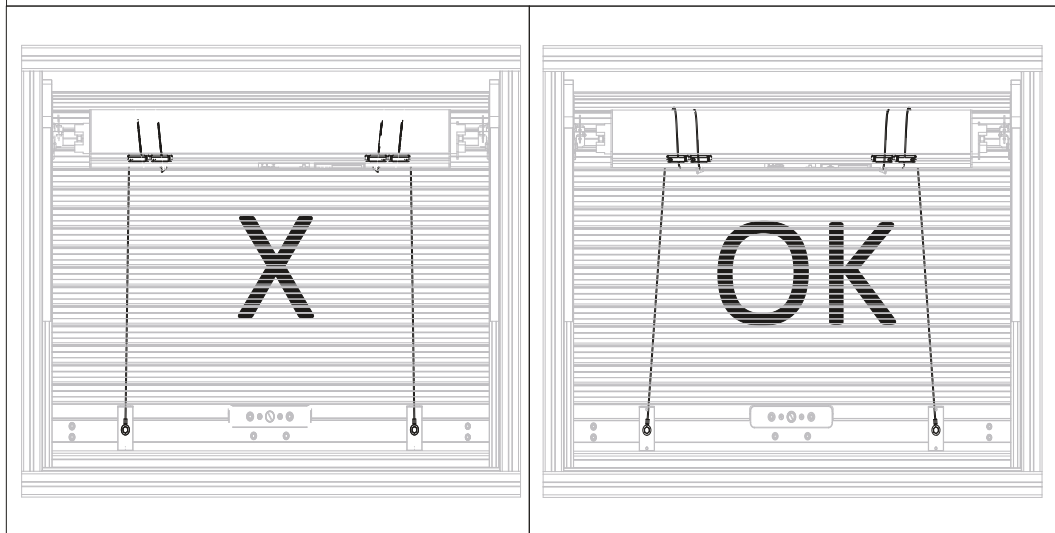


- 10 Put the cable through the 2 dedicated fasteners and screw tight in order to lock the cable position. Remove the blocking fork to release the spring tension.

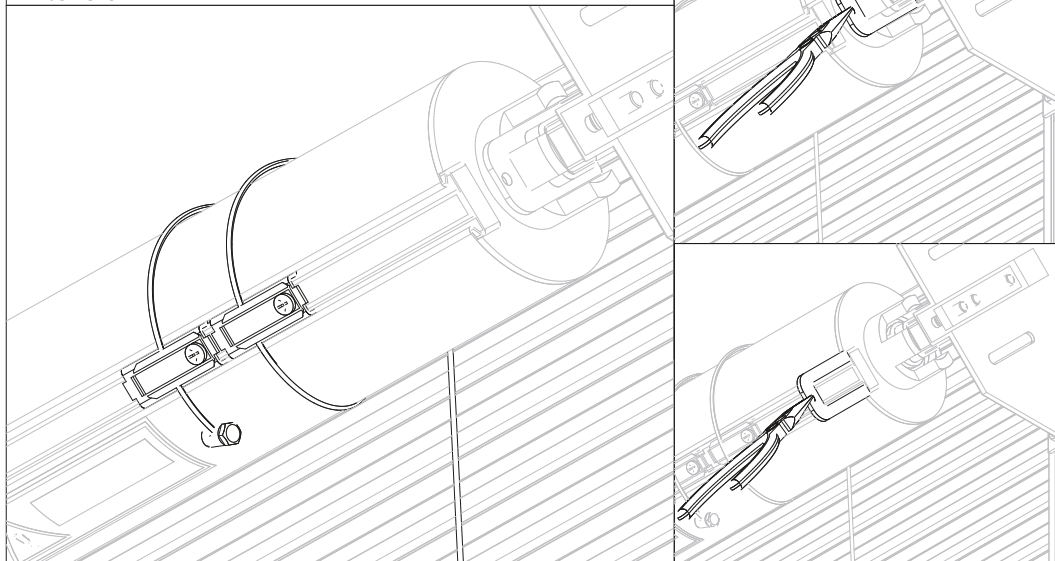


# Installation


- 11** Prepare together the drip channel profile (option) and the top seal. Remove 1 cap and the drip channel seal (1) in order to glide or glue (depending of your chosen top seal model). Cut the additional unnecessary top seal part (2).

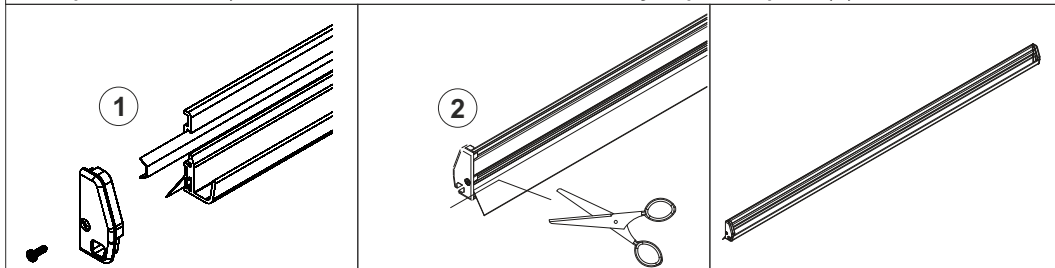

- 12** Place the drip channel on the bodywork against the header and attach it with screws or rivet behind the seal. Once installed, put back the drip channel seal and cap.

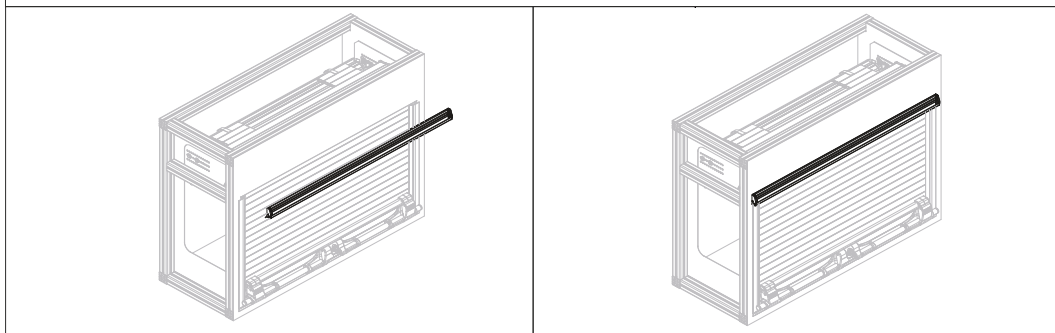


- 13** Put the blocking strikers and top stoppers in position taking care to place the bar tube inside the dedicated area and compress the bottom seal for 1/3. Drill and put the rivet to hold the position.

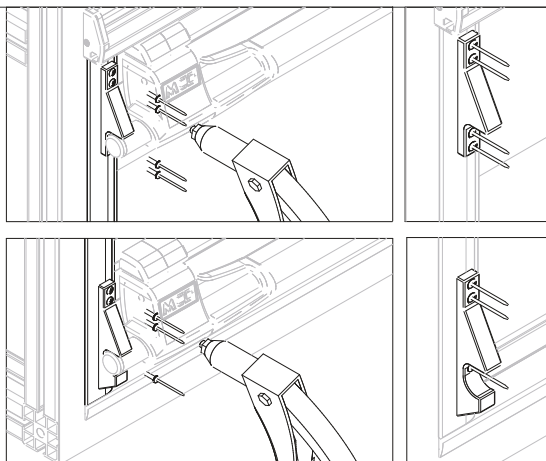

## Installation

- 13+** Install the double handle on the bottom shutter profile thanks to the screws supplied in the packet of accessories.

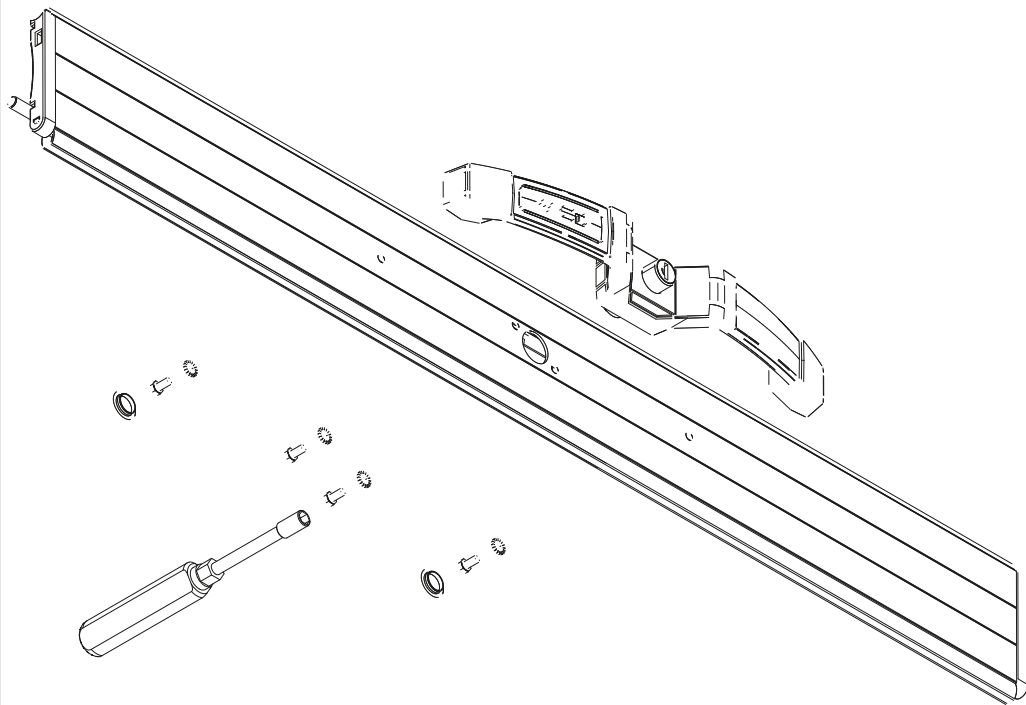

Place the locking rod into the bottom blocking strikers. Close the shutter taking care to compress the bottom seal for 1/3. Hold the position on the tracks thanks the screws.

